
# Mitel Model 6863i IP Phone Quick Reference Guide

# **Getting Started**

#### Navigation/Select:

Use  $\P \land$  to scroll through menus or messages on the screen. Use  $\P \triangleright$  to view different line/call appearances or, when in the Options List, enter or exit menus. When editing entries, pressing the  $\triangleleft$  key erases the character on the left and pressing the  $\triangleright$  key sets the option. Alternatively, pressing the center key sets the option as well on specific screens.

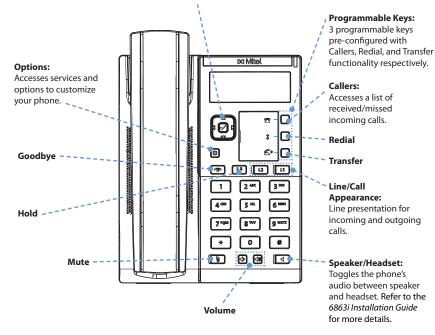

# 🕅 Mitel

# **Basic Call Handling**

#### Placing a Call

- 1. Lift the handset, press a **Line** key, or press the key.
- Dial the number from the keypad and press the
  Dial key.

#### **Ending a Call**

Place the handset on its cradle or press the real key.

### Answering a Call

Lift the handset for handset operation or press the **Line** key or key for handsfree operation.

## **Ignoring a Call**

Press the result when the phone is ringing to ignore the incoming call and (if configured) send the incoming call directly to voicemail.

# **Redialing**

Press the  $\checkmark$  key once to access a list of recently dialed numbers. Use the  $\blacktriangle$  and  $\lor$  navigation keys to scroll through the entries and press the  $\checkmark$  key to redial the selected number. Press the  $\clubsuit$  key twice to call the last dialed number.

### Muting

Press the 📃 key to mute the handset, headset, or speakerphone.

Holding and Resuming

- 1. To place a call on hold, press the 🚺 key when connected to the call.
- 2. To resume the call, press the **Line** key corresponding to the line where the call is being held.



# 🔀 Mitel

# **Advanced Call Handling**

The 6863i IP phone provides simple and convenient methods for transferring calls and establishing conference calls.

## **Call Transferring**

- 1. Ensure you are on active call with the party you wish to transfer.
- 2. Press the 🖉 key. This places the current call on hold.
- 3. Dial the number of the party to whom you want to transfer the call.
- 4. Press the key before the receiving party answers to perform a blind transfer. OR

Wait until the party has answered and then press the key to complete the transfer.

#### **3-Way Conferencing**

- 1. Ensure you are on active call with one of the parties with whom you wish to create a conference.
- 2. Press the 🗘 key and select *Services* > *Conference*.
- 3. Dial the number of the other party or, if applicable, press the **Line** key where the other party is being held.
- 4. When the other party answers, press the key and select *Services* > *Conference* again.

**Note:** Users can configure a programmable key with Conference functionality if so desired. For more information on configuring programmable keys please refer to the *6863i IP Phone User Guide*.

# Customization

#### Adjusting the Volume

Press the Weys during a call to adjust the volume of the audio device (i.e. handset, headset, or speakerphone). Pressing these keys when the phone is idle adjusts the ringer volume.

# Selecting a Ring Tone

- 1. Press the 🔅 key and select **Preferences** > **Tones** > **Ring Tone**.
- 2. Scroll through the ring tone list by pressing the  $\blacktriangle$  and  $\bigtriangledown$  navigation keys.
- 3. Press the  $\checkmark$  key or the **Enter** key to set the desired ring tone.

# 🕅 Mitel

Changing the Screen Language (if applicable)

- 1. Press the x key and select **Preferences > Language > Screen Language.**
- 2. Scroll through the list of available languages by pressing the  $\blacktriangle$  and  $\bigtriangledown$  navigation keys.
- 3. Press the 🔗 key or the **Enter** key to set the desired screen language.

# **Other Features**

### **Using the Callers List**

- 1. Press the 🕿 key to access the Callers List.
- 2. Scroll through the list by pressing the  $\blacktriangle$  and  $\bigtriangledown$  navigation keys.
- 3. Press the 🔗 key to place a call to the respective entry.

#### Viewing Your Phone's IP Address

To view your phone's IP address, press the key and select *Phone Status > IP&Mac Addresses.* 

